

## PreColour

Creativity made easy

PreColour is a pre-treatment, designed to always be used in combination with the Oil Plus 2C, to create special effects and contrasts. Enjoy unlimited creative possibilities thanks to the option to combine 4 different colours of PreColour (which can be mixed with one another) with a finish in one of the 40 colours of the Oil Plus 2C range. At the same time, the optimal molecular bonding of the Oil Plus 2C with the wood remains guaranteed.

PreColour preserves the natural look & feel of the wood and is suitable for all types of surfaces (floors, tables, stairs, walls, ...). In addition, the product is very environmentally friendly: the pre-treatment is water-based and contains 0% VOC.



### PRODUCT INFORMATION

#### › Specific characteristics

- 4 unique colours
- Natural look and feel
- Water-based
- Ecological: 0% VOC
- Ready to use
- Suitable for almost all wood types indoor
- Unlimited combinations possible: all colours can be mixed with one another

#### › Technical characteristics

- Physical state: liquid
- Flash point: > 60°C
- Density: 1,01 kg/L
- VOC content: 0 g/L
- Solubility in water: 100%

<b>Drying time</b>	± 12h The exact drying time depends on the surface, air humidity, temperature and ventilation.
<b>Application information</b>	All vertical and horizontal surfaces indoors
<b>Consumption</b>	10-15 m <sup>2</sup> /liter*
<b>Working temperature</b>	15-25°C
<b>Humidity at application range</b>	35-60%
<b>Wood humidity</b>	8-12%
<b>Storage</b>	Min. + 5°C, max. +30°C The product can be stored up to 24 months in dry, frost-free conditions and in its original packaging.

Remarks	This product is a pre-treatment and does not protect the wood. It has to be combined with Oil Plus 2C for maximum protection.
---------	---

*\* These usages are merely indicative. Results depend on wood type, sanding and method of preparation. It is always recommended to make a sample in order to calculate the exact usage.*

## › Colours on Oak



ARCTIC WHITE



NEUTRAL WHITE



JET BLACK



TERRA BROWN

Colours only serve as an example. We recommend doing a test on identical sanded wood.

PreColour is also available in a *Clear* version to dilute the 4 colours. This gives you even more freedom to create your own look.

## › Packaging



100 ML



1 L



2,5 L



5 L

## › Storage

The product can be stored for up to 24 months. Store in dry conditions and in the original unopened packaging. Keep away from frost.

### APPLICATION INFORMATION

#### › Instructions

#### › Furniture and stairs

**STEP 1.** Sand the surface scratch-free. Finish with screening net 100 to 150.

- When renovating, you must remove all the residues from previous treatments completely (varnish, oil, wax, etc.).

**STEP 2.** Vacuum thoroughly and eliminate remains of dust with Cleaner. Wait until the surface is completely dry (check the technical datasheet of the Cleaner before use).

**STEP 3.** Stir the product thoroughly and regularly with a stirring stick.

**STEP 4.** Apply an amount of PreColour with the Rubio Monocoat Brush and spread out using a red Scrubby Pad. Wipe out evenly with a lint-free cloth. Work in small areas to avoid overlapping.

**STEP 5.** Allow the surface to dry for  $\pm$  12 hours. The exact drying time depends on the foundation, moistening, temperature and ventilation.

**STEP 6.** After drying, break the raised wood fibres with a red Scrubby Pad and vacuum afterwards.

**STEP 7.** Now apply the Oil Plus 2C. Please consult the technical data sheet of the oil for a correct application. Be careful, in combination with PreColour it is best to use a white Scrubby Pad instead of a beige or red one when applying the oil!

#### › Floors

**STEP 1.** Sand the surface scratch-free. Finish with screening net 100.

- When renovating, you must remove all the residues from previous treatments completely (varnish, oil, wax, etc.).

**STEP 2.** Vacuum thoroughly and eliminate remains of dust with Cleaner. Wait until the surface is completely dry (check the technical datasheet of the Cleaner before use).

**STEP 3.** Stir the product thoroughly and regularly with a stirring stick.

**STEP 4.** Apply the PreColour with a Microfibre Pad. Make sure to use enough of the product and cover the whole area. Afterwards smooth out the area again with the same Microfibre Pad without applying much pressure.

**STEP 5.** Allow the surface to dry for  $\pm$  12 hours. The exact drying time depends on the foundation, moistening, temperature and ventilation.

**STEP 6.** After drying, break the raised wood fibres with a floor polisher equipped with a red Pad and vacuum afterwards.

**STEP 7.** Now apply the Oil Plus 2C. Please consult the technical data sheet of the oil for a correct application. Be careful, in combination with PreColour it is best to use a white Pad instead of a beige or red one when applying the oil!


### › Industrial application

If you want to apply this product in an industrial manner, we advise you to get in contact with our technical service team.

### › Tips & Tricks

- Stir the product well before application.
- When using several containers at one site, it is required to mix them for an even result.
- Switch off the floor heating 48 hours before application.
- Do not use in combination with water-based finishing products, such as Invisible Protector.
- Keep in mind that the wood type, grain structure and porosity of the wood can influence the end result. Therefore, it is important to make a sample first on the chosen wood species or the surface that needs treating.

### › Tools

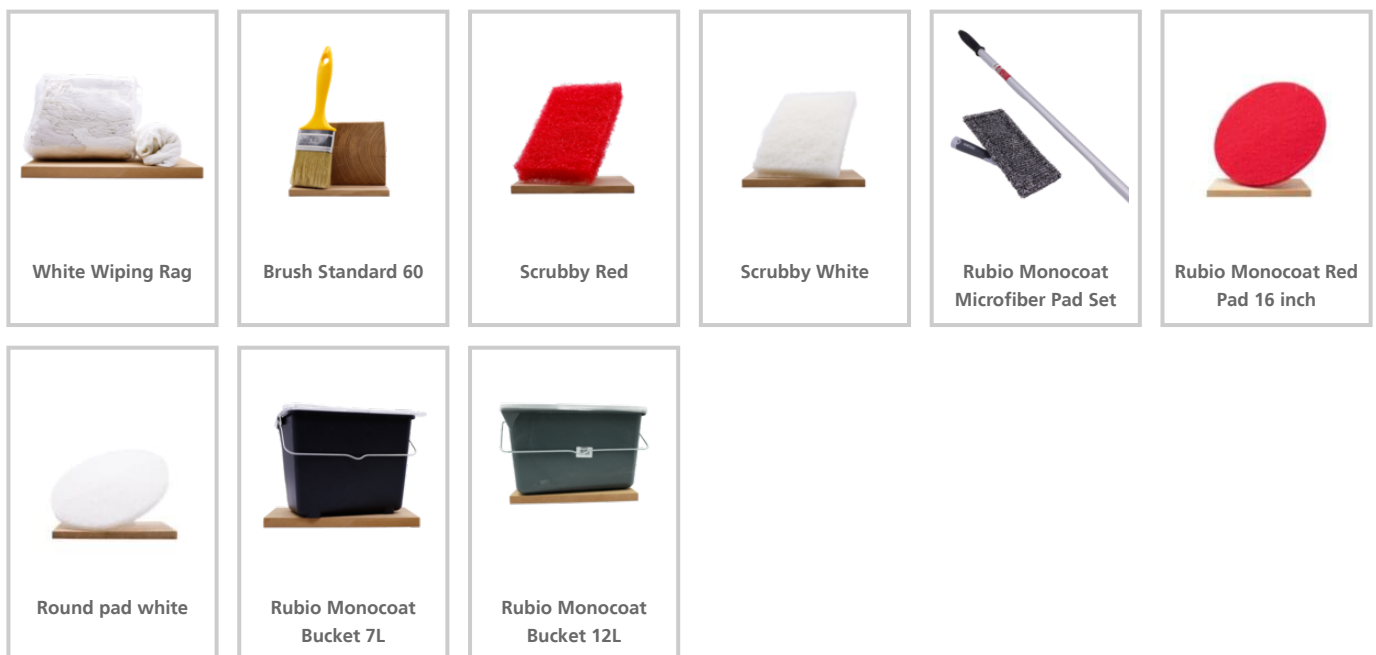

### › Certificates



Check the packaging and the safety data sheet for more details.

For our complete assortment of products for the protection and colouring of interior and exterior wood, please visit

**[www.rubimonocoat.com](http://www.rubimonocoat.com)**

**LIABILITY:** It is the user's responsibility to establish, through his own tests, whether the product is suitable for the chosen application. In no case can Muylle Facon NV be held liable for any consequential damage. The information above may be subject to changes, which will be published in the updated versions of the technical data sheet. We cannot be held liable for poor results due to causes that are not related to the quality of the product. This technical information has been drawn up based on the currently available information and knowledge. The most recent technical data sheets can be requested or are available on the website.

**Date of TDS: 25/06/2025. Check the safety information before using the product.**



Rubio<sup>®</sup>  
**MONOCOAT**  
MUYLLE  FACON

**Muylle Facon NV**

Ambachtenstraat 58

8870 Izegem (BELGIUM)

Phone +32 (0) 51 30 80 54

Fax +32 (0) 51 30 99 78

[info@muyllefacon.be](mailto:info@muyllefacon.be)

**[www.rubimonocoat.com](http://www.rubimonocoat.com)**